

FIGURE 1

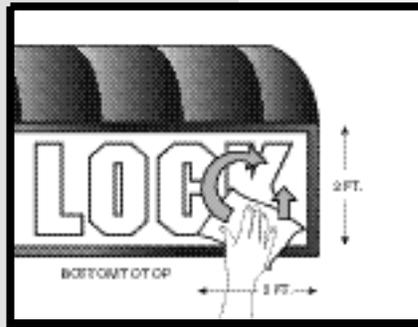


FIGURE 2

Application of Cooley Sign and Awning Cleaning and Protectant Products

As the face of the sign and awning industries changes, so does the need for more effective cleaning methods and solutions. Cooley Sign Products' three specially formulated cleaning products let you safely wash, restore, protect and maintain all sign and awning surfaces.

Cooley Clean is specifically designed for routine quarterly cleaning and warranty maintenance.

- Unique blend of active cleaning agents provides a one-step cleaning and protecting system.
- Utilizes a balanced combination of active surface agents for cleaning.
- Helps keep vinyl supple and like new.
- UV inhibitors deter color fading and molecular breakdown due to long-term exposure to ultraviolet rays.

Cooley Deep Clean should be used for heavily soiled applications in conjunction with Cooley Armor to seal and protect.

- Active ingredients penetrate deep into the sign or awning substrate to dissolve and displace dirt and soil from years of weathering and exposure.
- Restores signs and awnings to their original brilliance and impact.
- Environmentally safe and easy to use.
- Helps preserve and protect from future soiling.

Cooley Armor should only be used alone when protecting a new installation. Otherwise, it should be used with Cooley Deep Clean.

- Regular use of Cooley Awning Armor prevents future soil build-up.
- Restores the softness and suppleness found only in a new sign or awning.

- Provides protection from the damaging effects of exposure to sun, rain and airborne particles.

CLEANING INSTRUCTIONS

All applications should be cleaned by hand or with an awning cleaning pole. When using Cooley Armor, rub in a circular motion until the awning has a consistent sheen. Buffing is not required. Power washing is not recommended or warranted.

REQUIRED MATERIALS FOR HAND CLEANING

- Choose the selected cleaning product and follow package instructions for dilution.
 - Soft toweling or sponge (when using Cooley Clean and Cooley Armor).
 - Soft toweling or a soft bristle brush or sponge (when using Cooley Deep Clean).
 - Window extension ladder.
 - Water source and hose.
- A. Fill pail with one gallon of water.
 - B. Add cleaner according to package dilution instructions.
 - C. Thoroughly rinse awning with fresh water. (See figure 1.)
 - D. With sponge or towel, gently scrub awning in a circular motion, starting at the bottom and gradually moving to the top of the fabric to eliminate streaking. (Wash no more than about 4 sq. ft. at a time; do not allow cleaner to dry on fabric without rinsing.) (See figure 2.)
 - E. Rinse awning thoroughly with clean water.

Cooley recommends using only Cooley Sign & Awning cleaning and protectant products and assumes no warranty or liability if other than those recommended cleaning products are used.

Follow all instructions carefully and if further assistance is required, contact Cooley Sign Products at 800-992-0072

WHEN USING AN AWNING CLEANING POLE

- A. Assemble pole and hose according to manufacturer's printed instructions.
- B. Insert pick-up tube into the container filled with the recommended cleaner and water solution.
- C. Turn both pole valves off, turn water faucet on, open detergent valve. Detergent should be metered at 1 ounce per minute (refer to pole manufacturer's instructions to answer any questions).
- D. Gently scrub awning from bottom to top. (Wash no more than about 4 sq. ft. at a time; do not allow cleaner to dry on fabric (without rinsing.)
- E. Close detergent valve completely and open water valve to rinse thoroughly.
- F. Adjust pole length to conveniently reach all areas of the awning.

All of Cooley's cleaning products contain no drying penetrating agents, solvents or glycerin which may damage Cooley's membrane products. A UV inhibitor is added to all products to reduce the effects of the sun and help seal the vinyl facing.